

# LELO

## LELO DOT™ Travel



USER MANUAL

LELO\_DOT\_Travel\_PUB1\_Q224



Congratulations on acquiring LELO DOT™ Travel.

Before getting more closely acquainted with it, please take a moment to look through this user manual.

## **IMPORTANT**

Your pleasure object has been locked for transportation.

To unlock, simply connect the charger or see below.

## **SAFETY**

- Please consult your healthcare provider with any questions or concerns you may have regarding your condition.
- This device should be used by people aged 18 years and over.
- People with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.
- Minors should not clean and/or use the device unsupervised.
- Only use the product for the intended purpose. Sharing sex toys with other people may transmit sexual diseases. Do not share your sex toys with people other than your partner.
- Use protective measures with your partner if necessary.
- Do not use the product if you detect any cracks or signs of degradation on the covering material.
- To prevent stains, do not keep your product on the absorbent surfaces. If your product operates abnormally, turn it off and consult the support section on our website.
- Do not use the product if one or more components are damaged.

## COMPLIANCE STATEMENT

### a. WARNING

Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the equipment and/or void any relevant warranties.

### b. FCC and IC statements

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
- This class B digital apparatus complies with Canadian ICES-003.

### b. Déclarations relatives à la FCC et à l'IC

Cet appareil répond aux exigences de l'article 15 du Règlement de la FCC et aux normes RSS exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) il doit accepter toute interférence reçue, notamment celles susceptibles d'entraîner un fonctionnement non désiré.


Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna.
- Increasing the separation between the equipment and receiver.
- Connecting the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consulting the seller, the device dealer or an experienced radio/TV technician for help.

## GETTING TO KNOW YOUR LELO DOT™ Travel

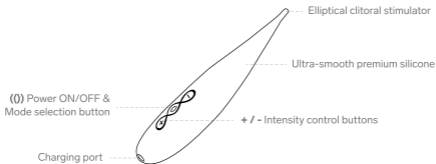


## USING YOUR LELO DOT™ Travel

- Before the first use, charge your LELO DOT™ Travel for 2 hours.
- Press and hold the **(0)** button to turn it on.
- Press the **(0)** button to switch between 8 modes.
- Use the **+** and the **-** buttons to increase or decrease the intensity.
- Press and hold the **(0)** button to turn off.



## CHARGING YOUR LELO DOT™ Travel

- Insert the DC plug into the DC port at the base of your LELO DOT™ Travel.
- Insert the mains plug into a USB Port. The LED on the interface of your LELO DOT™ Travel will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your LELO DOT™ Travel will emit a blinking white light.

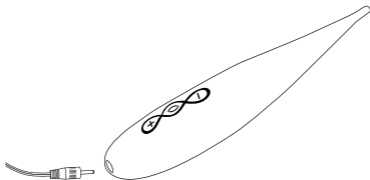

**Only use original chargers provided by LELO with your LELO DOT™ Travel.**

## CLEANING, STORAGE, AND SAFETY

Using LELO DOT™ Travel with hand creams or silicone-based lubricants may make the silicone permanently tacky.

LELO DOT™ Travel is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your LELO DOT™ Travel thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your LELO DOT™ Travel in direct sunlight and NEVER expose it to extreme heat.

Store your LELO DOT™ Travel in a dust-free place and keep it away from products of other materials.

The appliances must only be supplied at SELV.

## TROUBLESHOOTING

**The LED on your LELO DOT™ Travel does not pulse when the charger is connected:**

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

**Your LELO DOT™ Travel does not activate when the (O) button is pressed:**

- The battery is empty. Recharge your LELO DOT™ Travel.
- The interface of your LELO DOT™ Travel is locked.  
Hold down + and – for 3 seconds.

If you experience any other problems with your LELO DOT™ Travel or if you have any questions regarding the operation, please contact:  
**[customercare@lelo.com](mailto:customercare@lelo.com)**

## SPECIFICATIONS

**Materials:** Body-safe silicone, ABS Plastic

**Finish:** Smooth

**Size:** 138 x 26 x 27 mm / 5.4 x 1.02 x 1.06 in

**Weight:** 53 g / 1.87 oz

**Battery:** Li-Ion 200 mAh 3.7 V

**Charging:** up to 2 h at 5.0 V 200 mA

**Rated Power:**

- Input: 5 V 1 W
- Output: 3.7 V 0.74 W

**User time:** up to 1 h

**Standby:** 90 days

**Frequency:** 133 Hz

**Max. noise level:** < 60 dB

**Interface:** 3 buttons

## **REGISTER WARRANTY**

To activate your 1-year limited warranty, register the number provided on the LELO Authenticity Card at [LELO.COM/SUPPORT](https://LELO.COM/SUPPORT).

## **1-YEAR WARRANTY**

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials.

The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty.

If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at [LELO.COM](https://LELO.COM) and then select the option to make a warranty claim.

Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

## DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



SERIAL NO.



IPX 7



MANUFACTURE DATE



CLASS B DIGITAL APPARATUS



FOLLOW INSTRUCTIONS FOR USE



ETICHETTA AMBIENTALE	
Categoria	Linea guida per la raccolta
0 SCATOLA COLORATA	RACCOLTA CARTONINO
2 SCATOLA DI CARTONE	RACCOLTA CARTONINO
3 BASTOCCO IN EVA	
4 BORSA NON TESSUTA	RACCOLTA PLASTICA
5 BIVER BICO PET	
6 MANUALE	RACCOLTA CARTA

Hereby, LELoI AB declares that the radio equipment type [Non-Specific Short Range Device] is in compliance with Directive 2014/53/EU. LELoI AB declares that the product is also compliant with Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address: <https://www.lelo.com/regulatory>

**DISCLAIMER:** Users of this product do so at their own risk. Neither LELo nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2024 LELo AB. All rights reserved.

LELO AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by LELO Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELO Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELO Sweden.

Made in China.

US and International patents or patent applications apply to this product: visit <https://www.lelo.com/intellectual-property>

